

Repair Instructions Wheels F I

Monday, June 29, 2015 3:51 PM



Have a Screw Driver



Remove the Rim



Unscrew the wheel



Use a regular screw driver



Get ready to put the new one



Screw the wheel



Place the rim in place



Now is ready